

# KEY FOB PROGRAMMING INSTRUCTIONS - 21997127

## FOR AUTOMOBILES:

These vehicles can be programmed using the instructions below:

- 2003-2006 Cadillac Escalade
- 2003-2006 Cadillac Escalade ESV
- 2003-2006 Cadillac Escalade EXT
- 2003-2006 Chevrolet Avalanche 1500
- 2003-2006 Chevrolet Avalanche 2500
- 2003-2007 Chevrolet Silverado 1500
- 2003-2003 Chevrolet Silverado 1500 HD
- 2005-2007 Chevrolet Silverado 1500 HD
- 2003-2004 Chevrolet Silverado 2500
- 2003-2007 Chevrolet Silverado 2500 HD
- 2003-2007 Chevrolet Silverado 3500
- 2003-2006 Chevrolet Suburban 1500
- 2003-2006 Chevrolet Suburban 2500
- 2003-2006 Chevrolet Tahoe
- 2003-2007 GMC Sierra 1500
- 2003-2003 GMC Sierra 1500 HD
- 2005-2007 GMC Sierra 1500 HD
- 2003-2004 GMC Sierra 2500
- 2003-2007 GMC Sierra 2500 HD
- 2003-2007 GMC Sierra 3500
- 2003-2006 GMC Yukon
- 2003-2006 GMC Yukon XL 1500
- 2003-2006 GMC Yukon XL 2500
- 2003-2007 Hummer H2

These vehicles require the use of a professional scan tool for programming (see your local GM dealer or ACDelco Professional Service Center):

- 2005-2006 Chevrolet Equinox
- 2006 Pontiac Torrent
- 2002-2003 Saturn Vue

**⚠ IMPORTANT:** ALL TRANSMITTERS WHICH ARE TO BE RECOGNIZED BY THE PDM MUST BE PROGRAMMED IN A SINGLE PROGRAMMING SEQUENCE. WHEN USING THIS PROGRAM METHOD, ALL PREVIOUSLY PROGRAMMED TRANSMITTERS WILL BE ERASED UPON THE RECEIPT OF THE PROGRAMMING SIGNAL FROM THE FIRST TRANSMITTER.

## PROGRAMMING INSTRUCTIONS

The order in which the transmitters are programmed will determine its numbering position within the PDM memory. The first transmitter programmed will be transmitter #1, and the second transmitter programmed will be transmitter #2. The number stamped on the transmitter case is for reference only; #2 can be programmed as #1, or vice versa. Additional unnumbered transmitters are also available.

1. Close all the vehicle doors.
2. Insert the ignition key into the ignition lock cylinder.
3. Press and hold the door unlock switch.
4. While holding the door lock switch in the unlock position, cycle the ignition ON, OFF, ON, OFF.

5. Release the door unlock switch. The doors will lock and unlock to confirm the program mode.
6. Press and hold the LOCK button and the UNLOCK button simultaneously on one transmitter. After a delay of approximately 15 seconds, the doors will lock and unlock to confirm the programming of that transmitter.
7. Repeat the previous step to program up to 4 transmitters.
8. Turn the ignition switch to the RUN position in order to exit the keyless entry transmitter programming mode.
9. Operate the transmitter functions in order to verify correct system operation.