

Will the SurfShelf work with your machine?

The SurfShelf will work with most exercise machines including treadmills, elliptical trainers and exercise bikes.

However, because the SurfShelf attaches to the control console of the exercise machine, there are a few different styles of machines that may not work with the SurfShelf.

This guide shows the types of exercise machines that may be challenging for the SurfShelf.

NOTE: We will look up your exact machine for you if you think it falls in the categories shown in this guide, so please contact us directly and we'll get right back to you.

Also, there are workarounds for some machines that will make the SurfShelf work. So please give drop us a message and we'll work with you personally.

Freewell customer support:

Email: info@freewell.com

Tel: (800) 854-3079

Will the SurfShelf work with your machine?

Exercise machines with small and rounded control consoles will not work with the SurfShelf.



Will the SurfShelf work with your machine?

Exercise machines with handlebars that block the control console **AND** are less than 14 inches apart will not work with the SurfShelf.



Dimension A must be greater than 14 inches for the SurfShelf to work.

If your handlebars are >14 inches apart but you are unsure whether they block the console too much, please contact us and we will look it up for you.

Will the SurfShelf work with your machine?

Exercise machines with control consoles positioned below your body may not work properly with the SurfShelf.



Since the SurfShelf is attached to the control console, if it is below your body the SurfShelf will be positioned at this low level.

Will the SurfShelf work with your machine?

Exercise machines with control consoles that are substantially horizontal with the ground may not work properly with the SurfShelf.

However, there is a configuration that will work with some machines in this category, so if your treadmill has a somewhat low-angled console, contact us and we will look it up for you.



Will the SurfShelf work with your machine?

Exercise machines with control buttons at the top of the control console may result in some of the buttons being covered up.

However, there is a configuration that will allow you to push the SurfShelf/laptop combination to the left or right when you need to hit any buttons underneath.

Please contact us if you have a question regarding this and we will look up your machine for you.



Freewell™

THANK YOU!